Front seats



Seat position switch

The height of the driver's head restraint is automatically adjusted simultaneously with the seat position adjustment operation.

- Seatback angle switch
- \blacksquare Head restraint height adjustment switch (\rightarrow P. 92)
- 4 Seat cushion (front) angle switch
- 5 Vertical height adjustment switch
- 6 Lumbar support switch

Driver's seat: 4-way Front passenger's seat: 2-way

7 Seat cushion length adjustment switch

Seat operation switches on the side of the front passenger's seat



- 1 Seatback angle switch
- Forward
- Backward
- 1 Seat position switch
- **3** Forward
- 4 Backward

Operating the front passenger's seat from the rear seat (4-seat models)



- Moves the front passenger's seat forward
 - The signal beeps when seat operation stops at the forward limit.
- Moves the front passenger's seat backward

The seatback will return to the neutral position.

${ m n}\,$ Operating the front passenger's seat from the rear seat (4-seat models)

The front passenger's seat can be operated when the "POWER" switch is in ON mode. However, in the following situations, the front passenger's seat does not move even when the switch is operated.

- 1 The front passenger's seat belt is in use.
- 1 The front passenger's door is open. (The front seat will not move forward.)
- ${f n}$ Seat cushion automatic length adjustment (driver's seat only)

If the front of the cushion gets too close to the area around the instrument panel when the seat position is being adjusted, the seat cushion will automatically retract.

n Seat operation automatic stop function (4-seat models)

The seat operation will stop if a front seat is going to contact the retractable table. (A warning message will be shown on the multi-information display.)

A CAUTION

n Seat adjustment

To reduce the risk of sliding under the lap belt during a collision, do not recline the seat more than necessary.

If the seat is too reclined, the lap belt may slide past the hips and apply restraint forces directly to the abdomen, or your neck may contact the shoulder belt, increasing the risk of death or serious injury in the event of an accident.

Adjustments should not be made while driving as the seat may unexpectedly move and cause the driver to lose control of the vehicle.

n Operating the front passenger's seat from the driver's seat or rear seat

Do not operate the front passenger's seat when a passenger is seated in it. In addition, do not let anyone sit down in the front passenger's seat while the seat is being operated. The front passenger may catch their legs between the instrument panel and seat, resulting in injury.



∧ NOTICE

n Operating the front passenger's seat from the driver's seat or rear seat

Before operating the front passenger's seat, make sure that there is no luggage or any other objects on the seat or in the footwell that could prevent its operation. Failure to do so may result in excess force being applied, causing damage to the seat and/or the luggage.

1-4. Adjustable components (seats, mirrors, steering wheel) Power rear seat (5-seat models)*



- Seat selection switch

 The indicator light for the seat that can be operated comes on.
- Seat position adjustment switch
- Seatback upper angle adjustment switch
- \blacksquare Head restraint height adjustment switch (\rightarrow P. 92)

The seat return function linked to the door opening operation allows the seat to automatically return to the neutral position for easier access to and from the vehicle.

Returning the rear seat from the front seats



The seat will return to the neutral position while the button is pressed and held.

n Canceling the seat return operation



Pressing the "C" button will disable the seat return function. When disabled, the seat will not return when the door is opened.

The indicator light comes on when the seat return function is disabled.

Pressing the button again will enable the seat return function.

Performing either of the following cancels the seat returning operation:

- Press the "SET", "M" or "C" button.
- Press any of the seat adjustment switches.

$\, n \,$ Operating the seat return function after turning the hybrid system off

The seat will automatically return to the neutral position if the door is opened within approximately 45 seconds after the "POWER" switch is turned OFF.

A CAUTION

n Seat adjustment

To reduce the risk of sliding under the lap belt during a collision, do not recline the seat more than necessary.

If the seat is too reclined, the lap belt may slide past the hips and apply restraint forces directly to the abdomen, or your neck may contact the shoulder belt, increasing the risk of death or serious injury in the event of an accident.

Adjustments should not be made while driving as the seat may unexpectedly move and cause the driver to lose control of the vehicle.

n When adjusting the seat position

Keep sufficient footwell space to prevent your feet from being caught by the front seat.

n When returning the rear seats to the neutral position

Wait until passengers have gotten off the rear seat before operating the switch to avoid injuring the passengers.

Power rear seat (4-seat models)




The right-hand rear seat is a relaxation seat, which is equipped with a seatback angle adjustment function and an ottoman.

- Seat selection switch
 The indicator light for the seat that can be operated comes on.
- Seat position adjustment switch
- Seatback upper angle adjustment switch
- \blacksquare Head restraint height adjustment switch (\rightarrow P. 92)
- 5 Seatback angle adjustment switch
- 6 Ottoman angle adjustment switch
- 7 Front passenger's seat control switch $(\rightarrow P. 74)$
- 8 Relaxation mode switch

The seat return function linked to the door opening operation allows the seat to automatically return to the neutral position for easier access to and from the vehicle.

Returning the rear seat from the front seats

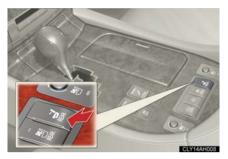

The seat will return to the neutral position while the button is pressed and held.

Relaxation mode operation

Relaxation mode can be entered by operating a switch. The front passenger seat will move forward and then the seatback of the relaxation seat will recline and the ottoman will simultaneously rise.



- Enters relaxation mode
- Returns to the neutral position.

 The signal beeps when either operation is completed.

n Relaxation mode

Relaxation mode can be entered when the "POWER" switch is in ON mode. However, in the following situations, relaxation mode cannot be entered even when the switch is operated:

- 1 The front passenger's seat belt is in use.
- 1 The front passenger's door is open. (The front seat will not move forward.)

n Canceling the seat return operation



Pressing the "C" button will disable the seat return function. When disabled, the seat will not return when the door is opened.

The indicator light comes on when the seat return function is disabled.

Pressing the button again will enable the seat return function.

Performing either of the following cancels the seat returning operation:

- Press the "SET", "M" or "C" button.
- Press any of the seat adjustment switches.

n Operation after turning the hybrid system off

- 1 The rear seat can be returned to the neutral position as long as the relaxation mode switch is operated within approximately 45 seconds after the "POWER" switch is turned OFF.
- 1 The seat return function is available for approximately 45 seconds after the "POWER" switch is turned OFF.

${ m n}\,$ Seat operation automatic stop function

If the rear seat and front passenger seat are going to come in contact with each other, the signal will beep and seat operation will stop.

A CAUTION

n Seat adjustment

To reduce the risk of sliding under the lap belt during a collision, do not recline the seat more than necessary.

If the seat is too reclined, the lap belt may slide past the hips and apply restraint forces directly to the abdomen, or your neck may contact the shoulder belt, increasing the risk of death or serious injury in the event of an accident.

Adjustments should not be made while driving as the seat may unexpectedly move and cause the driver to lose control of the vehicle.

n When adjusting the seat position and ottoman angle

Keep sufficient footwell space to prevent your feet from being caught by the front seat.

n When returning the rear seats to the neutral position

Wait until passengers have gotten off the rear seat before operating the switch to avoid injuring the passengers.

n Using the ottoman

- 1 Do not sit on the ottoman.
 If someone sits on the ottoman, the seat belt cannot be fitted properly, and they may be thrown from the seat, resulting in death or serious injury in the event of an accident or sudden braking.
- 1 When getting in or out of the vehicle, retract the ottoman. If the ottoman is not retracted, it may cause a fall, resulting in injury.



NOTICE

n To prevent an ottoman malfunction

- 1 Do not place any objects in the rear seat footwell that could prevent the operation of the ottoman.
- 1 Do not place heavy luggage on the ottoman.


Driving position memory (driver's seat)

Your preferred driving position (the position of the driver's seat and steering wheel, angle of the outside rear view mirrors, and height of seat belt) can be memorized and recalled with the touch of a button. It is also possible to set this function to activate automatically when the doors are unlocked. Three different driving positions can be entered into memory.

n Entering a position to memory

STEP 1 Turn the "POWER" switch to ON mode.

STEP 2 Adjust the driver's seat, steering wheel, outside rear view mirrors and seat belt height to the desired positions.

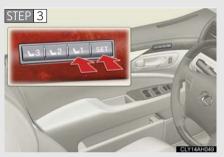

Push the "SET" button, then within 3 seconds push button "1", "2" or "3" until the signal beeps.

If the selected button has already been preset, the previously recorded position will be overwritten.

n Recalling the memorized position Check that the shift lever is set in "P".

STEP 1 Turn the "POWER" switch to ON mode.




Press button "1", "2" or "3" to recall the memorized position.

Linking driving position memory with door unlock operation

Record your driving position to button "1", "2" or "3" before performing the following:

► Using the wireless remote control

STEP 1 Turn the "POWER" switch OFF and close the driver's door.

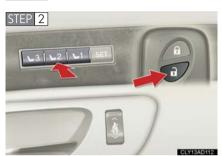

While pressing the desired button ("1", "2" or "3"), press on the wireless remote control until the signal beeps.

The driving position is recalled when the driver's door is unlocked using the entry function or wireless remote control and the driver's door is opened.


STEP 3 Open one of the doors.

If a door is not opened within 60 seconds after \Box is pressed, the doors will be locked again and the alarm will automatically be set. In case that the alarm is triggered, immediately stop the alarm. (\rightarrow P. 119)

► Using the door lock switch

Carry only one of the keys (including the card key) to which you want to link the driving position. If 2 or more keys are in the vehicle, the driving position cannot be linked properly.

STEP 1 Turn the "POWER" switch OFF and close the driver's door.

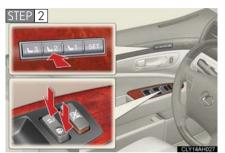

While pressing the desired button ("1", "2" or "3"), press the lock or unlock side on the door lock switch (either the driver or passenger side) until the signal beeps.

The driving position is recalled when the driver's door is unlocked using the entry function or wireless remote control and the driver's door is opened.

n Canceling the linked door unlock operation

STEP 1 Turn the "POWER" switch OFF and close the driver's door.

STEP 2 Using the wireless remote control: While pressing the "SET" button, press

 \mathbf{a} on the wireless remote control until the signal beeps.

Using the door lock switch: While pressing the "SET" button, press the lock or unlock side on the door lock switch until the signal beeps.

n Operating the driving position memory after turning the hybrid system off

Memorized positions (except the steering wheel position) can be activated up to 180 seconds after the driver's door is opened and another 60 seconds after it is closed again, even after the "POWER" switch is turned OFF.

n Stopping memorized position operation part-way through

Perform any of the following operations:

- 1 Press the "SET" button.
- 1 Press button "1", "2" or "3".
- 1 Adjust the seat using the switches (only cancels seat position recall).

n Seat operation automatic stop function (4-seat models)

The seat operation will stop if a front seat is going to contact the retractable table. (A warning message will be shown on the multi-information display.)

A CAUTION

n Seat adjustment caution

Take care during seat adjustment so that the seat does not strike the rear passenger or squeeze your body against the steering wheel.

Seat position memory (front passenger's seat)*

Your preferred front passenger seat position and height of seat belt can be memorized and recalled with the touch of a button.

Three different seat positions can be entered into memory.

n Entering a position to memory

STEP 1 Turn the "POWER" switch to ON mode.

STEP 2 Adjust the front passenger seat and seat belt height to the desired position.



Press the "SET" button, then within 3 seconds press button "1", "2" or "3" until the signal beeps.

If the selected button has already been preset, the previously recorded position will be overwritten.

n Recalling the memorized position

Check that the shift lever is set in "P".



Press button "1", "2" or "3" to recall the memorized position.

 ${
m n}\,$ Operating the seat position memory after turning the "POWER" switch OFF

Memorized position can be activated up to 180 seconds after the front passenger door is opened, even after turning the "POWER" switch OFF.

n Stopping seat position operation part-way through

Perform any of the following operations.

- 1 Press the "SET" button.
- 1 Press button "1", "2" or "3".
- 1 Adjust the seat position using the switches.

A CAUTION

n Seat adjustment caution

Take care during seat adjustment so that the seat does not strike the rear passenger.

Rear seat position memory*

The rear seat position can be memorized and recalled with the touch of a button.

n Entering a position to memory

STEP 1 Turn the "POWER" switch to ON mode.

STEP 2 Adjust the rear seat to the desired position.



Press the "SET" button until the signal beeps.

If the preset is being used, the previously recorded seat position will be overwritten.

n Recalling the memorized position



Press the "M" button until the signal beeps.

Relaxation seat: The memorized position will only be recalled if the ottoman is in a position higher than the memorized position. It will not move in an upward direction.

n Seat return function linked to the door opening operation

When the door is opened, the rear seat will automatically return to the neutral position. This function is available for 45 seconds after the "POWER" switch is turned OFF.

n Canceling the seat position recall or return function



Pressing the "C" button will disable the seat position recall or seat return function.

The indicator light comes on when the function is disabled.

Pressing the button again will enable the seat position recall or seat return function.

Performing either of the following cancels the seat returning operation:

- Press the "SET", "M" or "C" button.
- Press any of the seat adjustment switches.

A CAUTION


n Seat adjustment caution

Take care during seat adjustment so that the rear passengers do not strike the front seats.

Head restraints


Head restraints are provided for all seats.

n Front seats

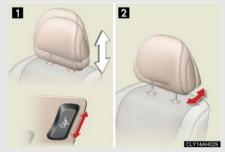


- Vertical adjustment →P. 74
- 2 Horizontal adjustment

- n Outside rear seats
- ▶ Power type

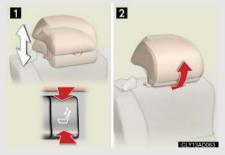


- 1 Vertical adjustment
 - 5-seat models: \rightarrow P. 77
 - 4-seat models: \rightarrow P. 80
- Horizontal adjustment

► Manual type

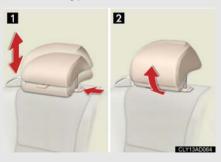

- Vertical adjustment
 Push and hold the lock release button when lowering.
- Horizontal adjustment

n Rear center seat (5-seat models)

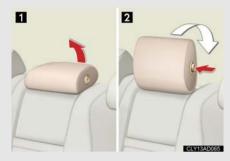


- 1 To use
- 2 To fold

n Removing and installing the head restraints

For removal and installation of the head restraint, contact your Lexus dealer.

n Adjusting the height of the head restraints (except rear center seat)

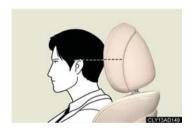

Make sure that the head restraints are adjusted so that the center of the head restraint is closest to the top of your ears.

A CAUTION

n Head restraint precautions

Observe the following precautions regarding the head restraints. Failure to do so may result in death or serious injury.

- 1 Use the head restraints designed for each respective seat.
- 1 Adjust the head restraints to the correct position at all times.
- 1 Do not drive with the head restraints removed

Seat belts


Make sure that all occupants are wearing their seat belts before driving the vehicle

n Correct use of the seat belts



- 1 Extend the shoulder belt so that it comes fully over the shoulder, but does not come into contact with the neck or slide off the shoulder.
- 1 Position the lap belt as low as possible over the hips.
- 1 Adjust the position of the seatback. Sit up straight and well back in the seat.
- 1 Do not twist the seat belt.

n Fastening and releasing the seat belt

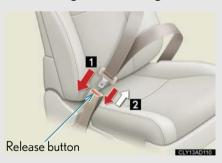

Fastening the belt


Push the plate into the buckle until a clicking sound is heard.

Releasing the belt

Press the release button.


If the seat belt cannot be pulled out of the retractor, firmly pull the belt and release it.

n Adjusting the seat belt shoulder anchor height (front seats)

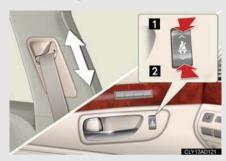


- 1 Up
- 2 Down

Seat belt comfort guide (outside rear seats)

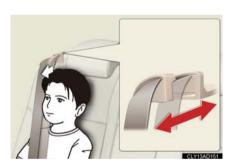

If the shoulder belt sits close to a person's neck, slide the seat belt comfort guide forward.

Seat belt pretensioners (front and outside rear seats)

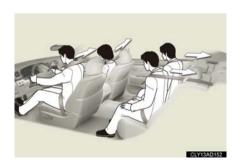

The pretensioner helps the seat belt to quickly restrain the occupant by retracting the seat belt when the vehicle is subjected to certain types of severe frontal collision.

The pretensioner may not activate in the event of a minor frontal impact, a side impact or a rear impact.

Pre-collision seat belts (front seats of vehicles with pre-collision system)

When the pre-collision sensor detects an obstacle and determines that a collision is unavoidable, the seat belts lessen collision injury by retracting the slack in the front seat belts before the collision, thus restraining the driver and passenger at an earlier stage.

The seat belts will also operate in the event of sudden braking.

 $(\rightarrow P. 240, 244)$


n Emergency locking retractor (ELR)

The retractor will lock the belt during a sudden stop or on impact. It may also lock if you lean forward too quickly. A slow, easy motion will allow the belt to extend so that you can move around fully.

n Automatic locking retractor (ALR)

When a passenger's shoulder belt is completely extended and then retracted even slightly, the belt is locked in that position and cannot be extended. This feature is used to hold the child restraint system (CRS) firmly. To free the belt again, fully retract the belt and then pull the belt out once more. $(\rightarrow P.148)$

n Pregnant women

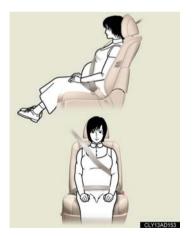

Obtain medical advice and wear the seat belt in the proper way. $(\rightarrow P. 94)$

Women who are pregnant should position the lap belt as low as possible over the hips in the same manner as other occupants. Extend the shoulder belt completely over the shoulder and position the belt across the chest. Avoid belt contact over the round part of the abdominal area.

If the seat belt is not worn properly, not only the pregnant woman, but also the fetus could suffer death or serious injury as a result of sudden braking or a collision.

n People suffering illness

Obtain medical advice and wear the seat belt in the proper way.

n Child seat belt usage

The seat belts of your vehicle were principally designed for persons of adult size.

- 1 Use a child restraint system appropriate for the child, until the child becomes large enough to properly wear the vehicle's seat belt. $(\rightarrow P. 143)$
- 1 When the child becomes large enough to properly wear the vehicle's seat belt, follow the instructions on P. 94 regarding seat belt usage.

Automatic adjustment of the seat belt shoulder anchor height (driver's seat and passenger's seat on 5 seat models)

A desired seat belt shoulder anchor height can be entered to memory and recalled automatically by the driving position memory and seat position memory. $(\rightarrow P. 84, 88)$

n Replacing the belt after the pretensioner has been activated

If the vehicle is involved in multiple collisions, the pretensioner will activate for the first collision, but will not activate for the second or subsequent collisions.

n Seat belt extender



If your seat belts cannot be fastened securely because they are not long enough, a personalized seat belt extender is available from your Lexus dealer free of charge.

A CAUTION

Observe the following precautions to reduce the risk of injury in the event of sudden braking, sudden swerving or an accident.

Failure to do so may cause death or severe injury.

n Wearing a seat belt

- 1 Ensure that all passengers wear a seat belt.
- 1 Always wear a seat belt properly.
- 1 Each seat belt should be used by one person only. Do not use a seat belt for more than one person at once, including children.
- 1 Lexus recommends that children be seated in the rear seat and always use a seat belt and/or an appropriate child restraint system.
- 1 To achieve a proper seating position, do not recline the seat more than necessary. The seat belt is most effective when the occupants are sitting up straight and well back in the seats
- 1 Do not wear the shoulder belt under your arm.
- 1 Always wear your seat belt low and snug across your hips.

n Adjustable shoulder anchor

Always make sure the shoulder belt is positioned across the center of your shoulder. The belt should be kept away from your neck, but not falling off your shoulder. Failure to do so could reduce the amount of protection in an accident and cause death or serious injuries in the event of a sudden stop, sudden swerve or accident. $(\to P. 95)$

n Seat belt pretensioners

- 1 Do not place anything, such as a cushion, on the front passenger's seat. Doing so will disperse the passenger's weight, which prevents the sensor from detecting the passenger's weight properly. As a result, the seat belt pretensioner for the front passenger's seat may not activate in the event of a collision.
- I If the pretensioner has activated, the seat belt becomes locked; it cannot be further extended, nor will it return to the stowed position. The seat belt cannot be used again and must be replaced at your Lexus dealer.

A CAUTION

n Child restraint lock function belt precaution

Do not allow children to play with the child restraint lock function belt. If the belt becomes twisted around a child's neck, it will not be possible to pull the belt out leading to choking or other serious injuries that could result in death.

If this occurs and the buckle cannot be unfastened, scissors should be used to cut the belt.

n Seat belt damage and wear

- 1 Do not damage the seat belts by allowing the belt, plate, or buckle to be jammed in the door.
- Inspect the seat belt system periodically. Check for cuts, fraying, and loose parts. Do not use a damaged seat belt until it is replaced. Damaged seat belts cannot protect an occupant from death or serious injury.
- 1 Ensure that the belt and plate are locked and the belt is not twisted.
 If the seat belt does not function correctly, immediately contact your Lexus dealer.
- 1 Replace the seat assembly, including the belts, if your vehicle has been involved in a serious accident, even if there is no obvious damage.
- 1 Do not attempt to install, remove, modify, disassemble or dispose of the seat belts. Have any necessary repairs carried out by your Lexus dealer. Inappropriate handling of the pretensioner may prevent it from operating properly, resulting in death or serious injury.

n Precaution for pre-collision seat belts

Do not rely on the pre-collision system to avoid accidents. Always pay attention to the surrounding conditions, and drive safely and responsibly.

n Using a seat belt extender

- 1 Do not wear the seat belt extender if you can fasten the seat belt without the extender.
- 1 Do not use the seat belt extender when installing a child restraint system because the belt will not securely hold the child restraint system, increasing the risk of death or serious injury in the event of an accident.
- 1 The personalized extender may not be safe on another vehicle, when used by another person, or at a different seating position other than the one originally intended.




n When using a seat belt extender

When releasing the seat belt, press on the buckle release button on the extender, not on the seat belt.

This helps prevent damage to the vehicle interior and the extender itself.

The steering wheel can be adjusted to a comfortable position while the "POWER" switch is in ACCESSORY or ON mode.

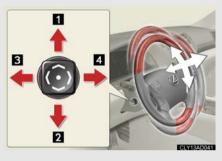

- 1 Up
- 2 Down
- 3 Away from the driver
- 4 Toward the driver

Auto tilt away



When the "POWER" switch is turned OFF, the steering wheel returns to its stowed position by moving up and away to enable easier driver entry and exit.

Turning the "POWER" switch to ACCESSORY or ON mode will return the steering wheel to the original position.

n Automatic adjustment of the steering position

A desired steering position can be entered to memory and recalled automatically by the driving position memory. $(\rightarrow P. 84)$



A CAUTION

n Caution while driving

Do not adjust the steering wheel while driving.

Doing so may cause the driver to mishandle the vehicle and cause an accident, resulting in death or serious injury.

Anti-glare inside rear view mirror

In automatic mode, sensors are used to detect the headlights of vehicles behind and automatically reduce the reflected light.



Turns automatic mode on/off

The indicator comes on when automatic mode is turned on.

The mirror will revert to automatic mode each time the "POWER" switch is turned to ON mode.

n To prevent sensor error



To ensure that the sensors operate properly, do not touch or cover them.

A CAUTION

n Caution while driving

Do not adjust the position of the mirror while driving.

Doing so may lead to mishandling of the vehicle and cause an accident, resulting in death or serious injury.

Outside rear view mirrors

Mirror angle can be adjusted using the switch when the "POWER" switch is in ACCESSORY or ON mode.



- Selects a mirror to adjust ("L": left or "R": right)
- Adjusts the mirror up, down, in, or out using the switch

Folding and extending the mirrors



- Folds the mirrors
- Extends the mirrors

Putting the outside rear view mirror folding switch in the neutral position sets the mirrors to automatic mode. Automatic mode allows the folding or extending of the mirrors to be linked to locking/unlocking of the doors.

 ${\rm n}\,$ When the mirrors are fogged up

Turn on the mirror defoggers to defog the mirrors. $(\rightarrow P. 298)$

n Automatic adjustment of the mirror angle

A desired mirror face angle can be entered to memory and recalled automatically by the driving position memory. $(\rightarrow P. 84)$

n Linked mirror function when reversing

The outside rear view mirrors will automatically angle downwards when the vehicle is reversing in order to give a better view of the ground. However, this function will not operate when the mirror select switch is in the neutral position (between "L" and "R").

n Auto anti-glare function

When the anti-glare inside rear view mirror is set to automatic mode, the outside rear view mirrors will activate in conjunction with the anti-glare inside rear view mirror to reduce reflected light. $(\rightarrow P. 103)$

A CAUTION

n When driving the vehicle

Observe the following precautions while driving.

Failure to do so may result in loss of control of the vehicle and cause an accident, resulting in death or serious injury.

- 1 Do not adjust the mirrors while driving.
- 1 Do not drive with the mirrors folded.
- 1 Both the driver and passenger side mirrors must be extended and properly adjusted before driving.

n When a mirror is moving

To avoid personal injury and mirror malfunction, be careful not to get your hand caught by the moving mirror.

n When the mirror defoggers are operating

Do not touch the rear view mirror surfaces, as they can become very hot and burn you.